Attachment

of
Self Righting Unit
on
SeaAir Suit





## HP Self righting unit

Attached to SeaAir Barents 2



Attached to SeaAir





## Attaching self righting unit to suit

Male connector in selfrighting bag (1).

The female connector is located behind your right shoulder (2).

Pull (2) up to your shoulder and connect with (1).





Connect female connector on suit (3) with male connector on the unit (4)





Enter toggle on unit (5) with loop on suit (4)





Three connecting points





## Prepare the self righting unit for use

Open zipper on self righting unit






Fully opened





The self righting inflator bladder is packed in an elastic bag inside the storage bag

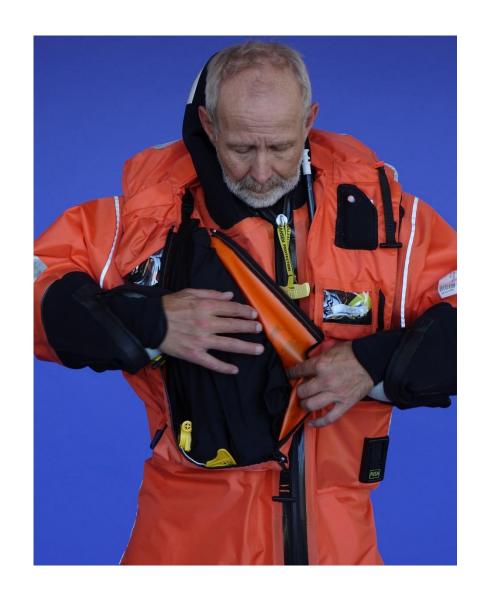



Find connector on bladder (7)





Connect male part on bladder (7) with female part on suit (8)





The self righting unit will inflated automatic when submerged in water.

You can deflate and inflate self righting bladder manually after automatic inflation.





Inflated

